



راهنمای استفاده از صندوق‌های نسوز - مدل LE




خدمات پس از فروش

ت ۰۲۱ - ۹۱۳۰۳۷۱۳ (۱۹۴)

ف ۰ ۹ ۳ ۹ ۷ ۲ ۷ ۶ ۱ ۳ ۸

🌐 www.sadidsafe.com

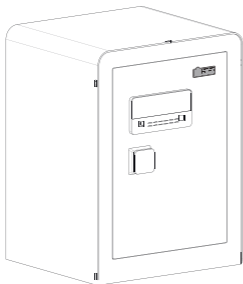

مدل‌ها

- صندوق نسوز مدل 550 LE
- صندوق نسوز مدل 700 LE
- صندوق نسوز مدل 800 LE
- صندوق نسوز مدل 1000 LE
- صندوق نسوز مدل 1200 LE
- صندوق نسوز مدل 1200D LE
- صندوق نسوز مدل 1500 LE

صندوق اسلحه نسوز مدل Gun Safe 1500LE

صندوق نسوز سدید

صندوق‌های نسوز و ضدسرقت تولید شده توسط شرکت فناوران ایمن گستر سدید، نسل جدید این محصولات در ایران هستند. در ساخت درب و بدنه این صندوق‌ها از ورق‌های فولادی با ضخامت بالا استفاده شده است.

برای مقاوم‌سازی این صندوق‌های نسوز در برابر حرارت، در بدنه آن پشم‌سنگ به کار رفته است.


لولای درب صندوق‌های نسوز سدید در فضای داخلی تعبیه شده است. امکان اتصال صندوق‌ها به زمین با استفاده از رول بولت‌های فولادی فراهم شده است.

نحوه نصب صندوق به زمین


مرحله ۱



مرحله ۲

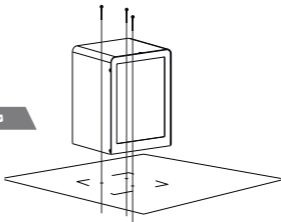

مرحله ۳

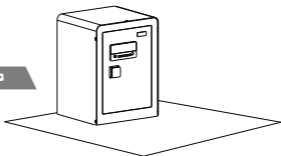

اجزا

۱- مانیتور رمز

۲- دکمه وضعیت مسافرت

۳- صفحه کلید رمز

۴- ورودی کلید اصلی

۵- محل ورود سوکت پاوربانک

۶- دستگیره درب

۷- صندوقچه داخلی

۸- ورودی کلید صندوقچه داخلی

۹- صندوقچه مخفی



۱۰- ورودی کلید صندوقچه مخفی

۱۱- محل نصب صندوق به زمین

۱۲- دکمه ریست

۱۳- محل قرارگیری باتری

۱۴- درب محل قرارگیری باتری

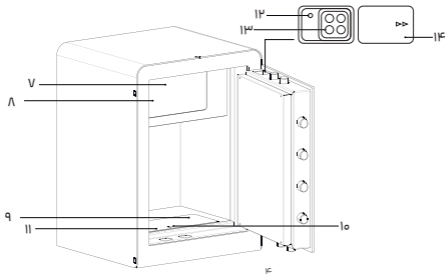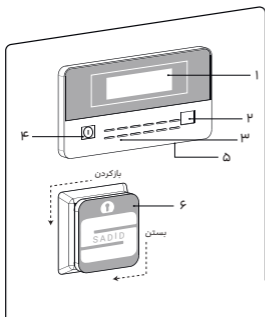

راه اندازی برای مرتبه اول

- ۱- ابتدا باتری ها را داخل پاور بانک قرار دهید.
- ۲- پاور بانک را به سوکت واقع در زیر قفل متصل نمایید تا قفل روشن گردد.
- ۳- کلید صندوق را در در جای خود (سمت چپ نمایشگر) قرار داده و به سمت راست بچرخانید.
- ۴- اکنون دکمه '#' را فشار دهید.
- ۵- سپس رمز کارخانه (۱،۲،۳،۴) را وارد نمایید و مجدداً دکمه '#' را بفشارید.
- نمایشگر به رنگ آبی در خواهد آمد و کلمه 'Open' نمایش داده خواهد شد.
- ۶- دستگیره صندوق را خلاف عقربه های ساعت بچرخانید و درب را باز نمایید.
- ۷- باتری ها را در جایگاه اصلی باتری قفل (واقع در لبه بالایی درب صندوق) قرار دهید.

نکته: در صورت ورود رمز اشتباه، واژه 'Error' به نمایش در خواهد آمد.

آژیر هشدار رمز اشتباه

در صورت ورود رمز اشتباه برای سه بار مکرر، قفل به مدت ۱ دقیقه صدای آژیر هشدار پخش خواهد کرد و در صورت ورود رمز صحیح، آژیر هشدار قطع خواهد شد.

تغییر رمز عبور

روش اول

نکته: در راستای افزایش امنیت صندوق، رمز کارخانه را تعویض نمایید.

۱- در حالتی که درب صندوق باز است، دکمه 'Reset' تعبیه شده در بالای درب را با برداشتن درب جا باتری، فشار دهید.

۲- رمز جدید (تا ۶ کاراکتر) را وارد نمایید.

۳- دکمه '#' را بفشارید.

تغییرات انجام خواهد شد.

نکته: برای حصول اطمینان، در حالی که درب صندوق باز است رمز جدید را یکبار امتحان نمایید و چنانچه رنگ نمایشگر به رنگ آبی و کلمه 'Open' به نمایش درآمد، رمز را درست وارد نموده اید.

نکته: در صورت ورود کاراکتر اشتباه، با استفاده از دکمه "*" قادر خواهید بود کاراکتر را پاک کنید.

روش دوم

نکته: در راستای افزایش امنیت صندوق، رمز کارخانه را تعویض نمایید.

- ۱- درب صندوق را با استفاده از رمز پیش فرض کارخانه، باز نمایید.
 - ۲- در حالتی که درب صندوق باز است، دکمه **#** را فشرده و رمز پیش فرض کارخانه را وارد نمایید.
 - ۳- بلافاصله دکمه **#** و سپس دکمه ***** را بفشارید.
 - ۴- رمز جدید (تا ۶ کاراکتر) را وارد نمایید.
 - ۵- دکمه **#** را وارد نمایید.
- رمز جدید فعال خواهد شد.

نکته: برای حصول اطمینان، در حالی که درب صندوق باز است رمز جدید را یکبار امتحان نمایید و چنانچه رنگ نمایشگر به رنگ آبی و کلمه **'Open'** به نمایش درآمد، رمز را درست وارد نموده اید.

نکته: در صورت ورود کاراکتر اشتباه، با استفاده از دکمه ***** قادر خواهید بود کاراکتر را پاک کنید.

بستن صندوق

قفل چند ثانیه پس از باز شدن دستگاه، به صورت خودکار مجدداً بسته خواهد شد و شما تنها نیازمند بستن دستگیره و نیز کلید صندوق خواهید بود.

ورود به منو امکانات

امکانات رمز دیجیتال LE سدید به شرح زیر است:

۱- ورود قفل به حالت ذخیره باتری (Sleep)

۲- فعال شدن آژیر هشدار ضربه و جابجایی

۳- نمایش تاریخچه بازگشایی صندوق

۴- مخفی سازی رمز ورودی نمایشگر

۵- تنظیم تاریخ و ساعت

۶- حالت مسافرت صندوق

۱- ورود قفل به حالت ذخیره باتری (Sleep)

قفل در صورت فشردن نشدن هیچ دکمه‌ای، پس از ۱۰ ثانیه به صورت خودکار وارد حالت ذخیره انرژی خواهد شد و فقط تاریخ و زمان نمایش داده خواهد شد.

در نظر داشته باشید در صورت نیاز به ورود رمز و خروج از حالت ذخیره انرژی، با فشردن دکمه '#، دستگاہ از این حالت خارج خواهد شد.

۲- فعال شدن آژیر هشدار ضربه و جابجایی

در هنگام بودن قفل در حالت ذخیره انرژی (Sleep Mode)، دکمه '0' را بفشارید.

نمایشگر واژه 'Bell On' را نمایش خواهد داد.

این بدین معنی خواهد بود که آژیر هشدار روشن شده است و در صورت ورود ضربه و یا جابجایی صندوق، آژیر هشدار به صدا در خواهد آمد و با ورود رمز صحیح، قطع خواهد شد.

۳- نمایش تاریخچه بازگشایی صندوق

با این ویژگی قادر خواهید بود دفعات بازگشایی صندوق را به تفکیک زمان و تاریخ، مشاهده نمایید.

در راستای مشاهده تاریخچه:

۱- درب را با ورود رمز صحیح باز نمایید.

۲- پس از نمایش داده شدن واژه 'Open'، کلید '0' را بفشارید.

دستگاه به ترتیب، ابتدا با نمایش تاریخ و ساعت، آخرین زمان باز شدن صندوق را نمایش خواهد داد.

۳- در صورت تمایل به نمایش دفعات بازگشایی قبلی، پیش از ناپدید شدن پیغام 'Pass 1'، دکمه '0' را بفشارید، شما قادر خواهید بود، تاریخچه بازگشایی‌های قبلی صندوق را نیز مشاهده نمایید.

نکته: با استفاده از دکمه '0' رکورد قبلی و با استفاده از دکمه '8' رکورد بعدی را مشاهده خواهید کرد.

نکته مهم: این رمز قادر است تا ۴۵ بار آخر بازگشایی صندوق را ثبت کرده و نمایش دهد.

۴- مخفی سازی رمز بر روی نمایشگر

در صورت تمایل به نمایش داده نشدن کاراکترهای رمزتان بر روی نمایشگر، ابتدا کلید '# و بلافاصله کلید '*' را بفشارید، سپس رمز خود را وارد نمایید. دستگاه کاراکترها را نمایش نخواهد داد.

نکته: در صورت تمایل به نمایش داده نشدن کاراکترها، برای هر بار استفاده، ملزم به استفاده از این روش خواهید بود.

۵- تنظیم تاریخ و ساعت

۱- در هنگامی که دستگاه بر روی حالت ذخیره انرژی باشد، دکمه '*' را بفشارید.

دستگاه روشن خواهد شد.

۲- اکنون تاریخ و ساعت موردنظر را وارد نمایید.

۶- حالت مسافرت صندوق

با فشردن دکمه وضعیت مسافرت (در قسمت اجزا شماره ۲) قفل خاموش و وارد حالت مسافرت خواهد شد و این امکان به شما داده خواهد تا در

بازه‌های زمانی طولانی که دور از خانه هستید و یا بنا به هر دلیلی نیازی به بازگشایی صندوق ندارید، از هدر رفت باتری جلوگیری کرده و به عمر مفید قفل بیافزایید.

سیستم ضد تخریب قفل

این صندوق به سیستم ضد تخریب قفل مجهز می‌باشد. این سیستم به این نحو عمل می‌نماید که در صورت تلاش سارق جهت تخریب و یا نفوذ به قفل به واسطه مته و یا سایر ابزار تخریب، بلافاصله تمامی زبانه‌ها به حالت قفل مطلق درآمده و از کنترل قفل خارج خواهند شد و هیچ‌گونه دستکاری در قفل جهت بازگشایی زبانه‌ها، کارساز نخواهد بود.

بازگشایی

در صورت ورود صندوق به فاز تخریب، جهت بازگشایی صندوق با واحد خدمات پس از خرید شرکت، تماس حاصل نمایید.

نحوه تعویض باتری و استفاده از پاور بانک

در صورت اتمام شارژ قفل صندوق، شما می‌توانید با اتصال پاور بانک به سوکت تعبیه شده در زیر قفل، قفل را روشن نموده و پس از بازگشایی صندوق و برداشتن درپوش باتری (واقع در لبه بالایی درب صندوق)، اقدام به تعویض باتری نمایید.

فراموشی رمز و حالت فوق العاده

در صورت فراموشی رمز صندوق، بلافاصله با واحد خدمات پس از خرید شرکت سدید تماس حاصل فرمایید تا همکاران ما در اسرع وقت جهت بازگشایی صندوق با شما ارتباط برقرار نمایند.

اطلاع و هشدار

دفترچه راهنما و پاوربانک را در داخل صندوق قرار ندهید.

the upper edge of the safe door), proceed to replace the battery.

Forgetting Password

In case of Forgetting the safe password, immediately contact the customer service unit of Sadid Company so that our colleagues can promptly establish communication with you for the safe opening process.

Cautions & Further Information

Don't Place the Safe's User Manual & Power Bank inside the Safe.

6- Travel Mode

By pressing the travel mode button (in the component part number 2), the lock will turn off and enter the travel mode, and this will allow you to open the safe during long periods of time when you are away from home or for any reason. Prevent battery waste and increase the useful life of the lock.

Lock's Anti-Destruction System Activation

This safe is equipped with an Anti-Destruction System.

This system operates in such a way that, in the event of an attempt by a thief to tamper with or force the lock using a drill or other tampering tools, all bolts will immediately go into an absolute locked state. They will disengage from the lock control, and any manipulation of the lock for opening the bolts will not be effective.

Opening

In the event that the safe enters the anti-tamper phase, contact the company's after-sales service unit for safe opening.

Battery Replacement and Using a Power Bank

If the safe lock battery is depleted, you can turn on the lock by connecting a power bank to the socket located under the lock. After opening the safe and removing the battery cover (located on

3- If you wish to display previous opening instances, before the 'Pass 1' message disappears, press the '0' key. You will be able to view the history of previous safe openings as well.

Note: Using the '0' key, you can view the previous record, and using the '8' key, you can view the next record.

Note: This device is capable of recording and displaying the last 45 instances of safe openings.

4- Hiding Password Characters on Lock's Display

In Case you prefer not to display the characters of your password on the screen:

- 1- Press the '# key
- 2- Immediately followed by the '** key
- 3- enter your password.

The device will not show the characters.

Note: If you prefer not to display the characters, you will need to use this method each time.

5- Date & Time Adjustment

- 1- When the device is in power-saving mode, press the '** button.

The device will turn on.

- 2-Now enter the desired date and time.

5 - Date & Time Adjustment

6 - Travel Mode

1- Display Power Saving Mode

If no button is pressed, the lock will automatically enter power-saving mode after 10 seconds, and only the date and time will be displayed.

Keep in mind that if you need to enter a password and exit power-saving mode, pressing the '#' button will take the device out of this state

2- Shock or Displacement Alarm Activation

When the lock is in Sleep Mode, press the '0' key.

The display will show the words 'Bell On'

This means that the alarm is activated, and in the event of an impact or movement of the safe, the alarm will sound. It will be deactivated by entering the correct password.

3- Safe's Interactions Records

With this feature, you will be able to view the instances of opening the safe sorted by time and date.

To view the history:

- 1- Open the door by entering the correct password.
- 2- After the word 'Open' is displayed, press the '0' key.

The device will sequentially display the date and time, showing the last time the safe was opened.

- 3- Immediately press the # button and then the “*” button.
- 4- Enter the new password (up to 6 characters).
- 5- Press the “#” button.

The new password will be activated.

Note: To make Sure, while the safe door is open, try the new password once. If the display turns blue and shows the word ‘Open’ you have entered the password correctly.

Note: In case of entering the wrong character, you can delete the character using the “*” button.

Closing the Safe

The lock will automatically close a few seconds after the device is opened, and you will only need to close the handle and also the safe key.

Digital Lock Features

The features of LE Sadid digital Lock are as follows:

Display Power Saving Mode (Sleep mode)

- 1 - Display Power Saving Mode
- 2 - Shock or Displacement Alarm Activation
- 3 - Safe's Interactions Records
- 4 - Hiding Password Characters on Lock's Display

Password Changing

1st Method

Important Note: To enhance the security of the safe, Change the factory password.

- 1- While the Safe is Open, press the **'Reset'** button located at the top of the door by removing the battery cover.
- 2- Enter the new password (up to 6 characters).
- 3- Press the **'#'** button.

The changes will be Mad.

Note: To make Sure, while the safe door is open, try the new password once. If the display turns blue and shows the word **'Open'** you have entered the password correctly.

Note: In case of entering the wrong character, you can delete the character using the **'**'** button.

2nd Method

Important Note: To enhance the security of the safe, Change the factory password.

- 1- Open the safe door using the default password.
- 2- While the safe door is open, press the **'#'** button and enter the default password.

First Time Set up:

- 1- First, insert the batteries into the power bank.
- 2- Connect the power bank to the socket located under the lock to activate the lock.
- 3- At first, place the safe key in its slot (on the left side of the display) and turn it to the right.
- 4- Now press the '#' button.
- 5- Then enter the factory Set code (1234) and press the '#' button again.

The display will turn blue, and the word '**Open**' will be shown.

- 6- Turn the safe handle and open the door.
- 7- Place the batteries in the main battery compartment (located on the upper edge of the safe's door).



Note: If the wrong code is entered, the word '**Error**' will be displayed

Wrong Code Alarm Activation



In case of entering the wrong code three times, the lock will sound an alert for 1 minute, and if the correct code is entered, the alert will be canceled.

Components:

- 1- Digital Lock Monitor
- 2- Travel Station Button
- 3- Digital Lock Keyboard
- 4- Main Key Input
- 5- Power Bank Socket Input
- 6- Door Handle
- 7- Internal Component
- 8- Internal Component Key Input
- 9- Hidden Component
- 10- Hidden Component Key Input
- 11- Ground Installation Location for Component
- 12- Reset Button
- 13- Battery Placement Location
- 14- Battery Placement Cover

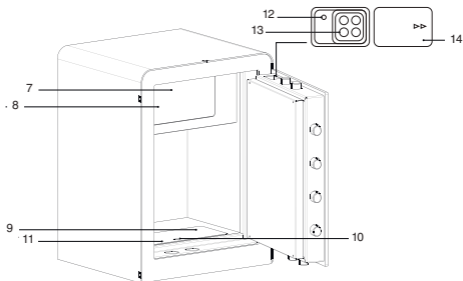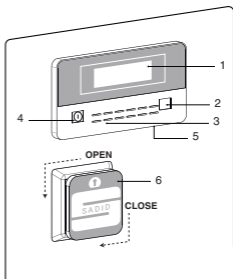

How to Install

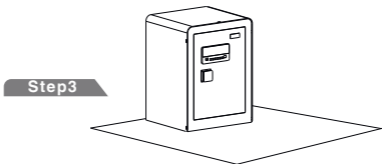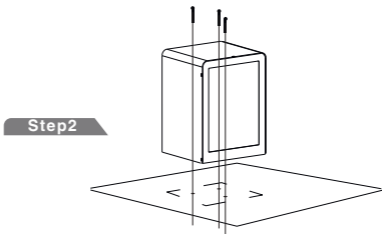

Models:

- Model 550 LE
- Model 700 LE
- Model 800 LE
- Model 1000 LE
- Model 1200 LE
- Model 1200 D LE
- Model 1500 LE
- Gun Safe (1500 LE)



Sadid Safe Co. Anti-Theft & Fire Proof Safes:

- Fireproof and theft-resistant safes produced by Sadid Safe Security Innovators are the new generation of these products in Iran.
- The construction of the doors and bodies of these safes involves the use of high-thickness steel sheets.
- To enhance the resistance of these safes against moisture and heat, rock wool has been used. The hinges of the fireproof safes from Sadid are installed in the interior space.
- The possibility of connecting the safes to the ground is provided through the use of steel roll bolts.



User Manual

Sadid Fireproof Safe –LE Model



Customer Services

☎ 021-91303713(194)

☎ 09397276138

🌐 www.sadidsafe.com