



راهنمای استفاده از سیف باکس با قفل دیجیتال ساده



خدمات پس از فروش

☎ ۰۲۱ - ۹۱۳۰۳۷۱۳ (۱۹۴)

☎ ۰۹۳۹۷۲۷۶۱۳۸

🌐 www.sadidsafe.com

مدل‌ها



سیف باکس مدل 350W

سیف باکس مدل 430W

سیف باکس مدل 470W

سیف باکس مدل 460H

سیف باکس مدل 430D

سیف باکس مدل Home Safe

سیف باکس مدل اثر انگشتی Home Safe-Finger Print

فایل نسوز دو کشور EAC 700 (قابل نصب نمی‌باشد)

فایل نسوز سه کشور EAC 1100 (قابل نصب نمی‌باشد)

فایل نسوز چهار کشور EAC 1400 (قابل نصب نمی‌باشد)

صندوقچه داخلی صندوق نسوز 2000 (قابل نصب نمی‌باشد)

صندوق نسوز سدید

صندوق‌های نسوز و ضدسرقت و سیف‌باکس‌های تولید شده توسط شرکت

فناوران ایمن گستر سدید، نسل جدید این محصولات در ایران هستند.

در ساخت درب و بدنه این صندوق‌ها از ورق‌های فولادی با ضخامت بالا

استفاده شده است.


لولای درب سیف‌باکس‌های سدید در فضای داخلی تعبیه شده است.

امکان اتصال صندوق‌ها به زمین و دیوار با استفاده از رول بولت‌های فولادی


فراهم است.

نحوه نصب صندوق به دیوار

نحوه نصب صندوق به زمین

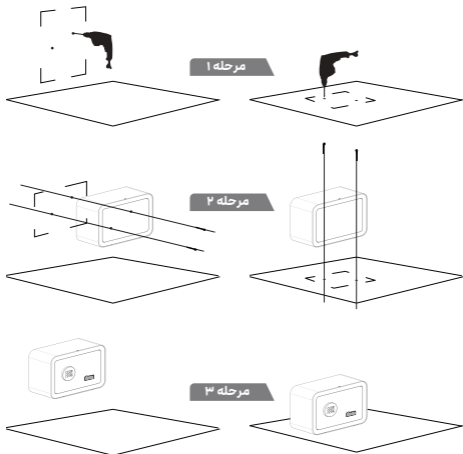

اجزا

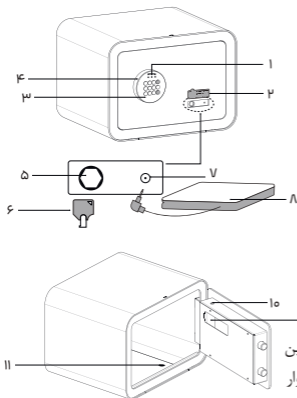

۱- چراغ (زرد، سبز، قرمز)

۲- لوگوی آهنربایی

۳- صفحه کلید

۴- دستگیره درب

۵- ورودی کلید اضطراری

۶- کلید اضطراری

۷- ورودی باتری پشتیبان

۸- باتری پشتیبان

۹- جعبه داخلی باتری

۱۰- دکمه ری استارت

۱۱- محل نصب صندوق به زمین

۱۲- محل نصب صندوق به دیوار



نما از پشت صندوق

راه اندازی برای مرتبه اول

سیف باکس های سدید، در دفعه اول به کمک رمز و پاور بانک باز خواهد شد و در دفعات بعدی امکان بازگشایی با کلید اضطراری و رمز را خواهد داشت.

کلید اضطراری داخل صندوق قرار دارد.

بازگشایی بارمز عبور

- ۱- ابتدا باتری های موردنیاز را وارد پاور بانک نمایید.
 - ۲- پاور بانک را به سوکت شارژ قفل واقع در زیر لوگوی آهن ربایی سدید متصل نمایید تا قفل فعال گردد.
 - ۳- سیف باکس های سدید بارمز کارخانه ۱۲۳۴۵۶۷۸ فعال می باشند.
 - ۴- این رمز را وارد نموده و در انتها کلید '# #' را فشار دهید.
- چراغ سبز روشن خواهد شد.
- ۵- دستگیره دور قفل را در جهت حرکت عقربه های ساعت بچرخانید تا قفل باز شود.
 - ۶- باتری های موردنیاز قفل را در جایگاه اصلی باتری قفل واقع در پشت درب قرار دهید.

بازگشایی باکلید اضطراری

- ۱- لوگوی آهن ربایی پایین صندوق را بردارید تا ورودی کلید اضطراری و باتری پشتیبان نمایان شود.
- ۲- کلید را وارد نموده و بر خلاف جهت عقربه های ساعت بچرخانید و در نظر داشته باشید تا کلید را بیرون نکشید؛ در غیراینصورت قفل به موقعیت بسته بودن خود باز خواهد گشت.
- ۳- دستگیره را در جهت حرکت عقربه های ساعت بچرخانید تا درب باز شود.
- ۴- درب جعبه باتری داخلی که در پشت درب تعبیه شده را باز نمایید.
- ۵- چهار عدد باتری نیم قلمی را داخل جعبه باتری قرار دهید.

تغییر رمز عبور

۱- دکمه 'ری استارت' که در پشت درب (داخل صندوق) تعبیه شده است را فشار دهید.

دو صدای بوق خواهید شنید و چراغ زرد روشن خواهد شد.

۲- رمز عبور جدید (۱ الی ۸ رقم) را وارد نمایید.

دو صدای بوق خواهید شنید و چراغ زرد خاموش خواهد شد.

۳- دکمه '#' را جهت تایید بفشارید.

نکته: برای حصول اطمینان، در حالی که درب صندوق باز است رمز جدید را یکبار امتحان نمایید.

باز کردن صندوق

۱- رمز عبور را وارد نمایید.


دو صدای بوق کوتاه خواهید شنید و چراغ

سبز روشن خواهد شد.

۲- دکمه '#' را بفشارید.

۳- دستگیره دور قفل را به جهت حرکت

عقره‌های ساعت بچرخانید تا درب باز شود.

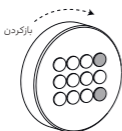


بستن صندوق

۱- درب را ببندید.

۲- دستگیره را بر خلاف جهت عقربه‌های

ساعت بچرخانید.



فعال شدن آژیر هشدار رمز اشتباه

هنگامی که رمز اشتباه وارد شود، چراغ زرد، ۶ بار روشن و خاموش خواهد شد.

در صورت ورود رمز اشتباه برای ۳ بار، آژیر هشدار به مدت ۴۰ ثانیه فعال خواهد شد.

نکته: جهت خاموش شدن آژیر هشدار، رمز صحیح را وارد نمایید.

فعال کردن آژیر هشدار ضربه و جابجایی

۱- دکمه ‘##’ را بفشارید.

دو صدای بوق خواهید شنید و چراغ زرد، ۶ بار روشن خاموش خواهد شد. آژیر فعال گشته است.

نکته: در صورت ورود شوک یا ضربه، آژیر هشدار به مدت ۴۰ ثانیه فعال خواهد شد. جهت خاموش شدن آژیر هشدار، رمز صحیح را وارد نمایید.

نحوه تعویض باتری و استفاده از پاوربانک

۱- در هنگام وارد نمودن رمز عبور، در صورت مشاهده روشن شدن همزمان چراغ‌های قرمز و سبز، از ضعیف بودن باتری مطلع خواهید شد و می‌بایستی باتری را تعویض نمایید.

۲- در صورت اتمام باتری قفل، می‌توانید با استفاده از کلید اضطراری و یا پاوربانک پشتیبان، درب صندوق را باز نموده و اقدام به تعویض باتری نمایید.

فراموشی رمز و حالت فوق العاده

- ۱- در صورت فراموشی رمز صندوق، لگوی آهن ربایی پایین صندوق را بردارید تا ورودی کلید اضطراری نمایان شود.
- ۲- کلید را وارد نموده و بر خلاف جهت عقربه‌های ساعت بچرخانید و در نظر داشته باشید تا کلید را بیرون نکشید؛ در غیراینصورت کلید به موقعیت اصلی خود باز خواهد گشت.
- ۳- دستگیره را در جهت جرکت عقربه‌های ساعت بچرخانید تا درب باز شود.
- ۴- رمز را بر اساس مراحل تعیین شده برای تغییر رمز به دلخواه تغییر دهید.

اطلاع و هشدار

- ۱- دفترچه راهنما و پاوربانک را در داخل صندوق قرار ندهید.
- ۲- در صورت عدم استفاده از صندوق برای مدت طولانی، باتری‌ها را از قفل خارج نمایید تا از خرابی سیستم الکترونیکی قفل، جلوگیری بعمل آید.
- ۳- در صورت نصب صندوق به دیوار، از استحکام و ایمن بودن دیوار، اطمینان حاصل نمایید.

Forgetting Password:

In Case of forgetting the password, Open the Safe Box by using the Emergency Key, to do so, Follow the procedure below:

1. Remove the magnetic logo at the bottom of the box to reveal the emergency key entry and backup battery port.
2. Insert the key and turn it counterclockwise. Make sure not to pull the key out; otherwise, it will return to its original position.
3. Rotate the handle in the clockwise direction to open the door.
4. Change the password as desired based on the steps "Password Changing".

Cautions & Further Information:

1. Do not place the user manual and power bank inside the Safe Box.
2. If the safe is not used for an extended period, remove the batteries from the lock to prevent damage to the electronic lock system.
3. Please make sure of the strength and safety of the wall or the Ground Before installing the Safe Box.

Activating the Alert Alarm

When an incorrect password is entered, the yellow light will flash on and off 6 times.

If an incorrect password is entered 3 times, the alert alarm will be activated for 40 seconds.

Note: To turn off the alert alarm, enter the correct password.

Activating the Shock and Displacement Alarm

1. Press the '#' button.

You will hear two horn sounds, and the yellow light will flash on and off 6 times & The alarm is now active.

Note: In the event of a shock or impact, the alert alarm will be activated for 40 seconds & you have to enter the correct password to turn off the alert alarm.

Battery Replacement Procedure & Using a Power Bank

1. When entering the password, if you notice the simultaneous illumination of the red and green lights, you will be informed about the weak battery, and it will be necessary to replace the battery.

2. In case of the lock battery being dead, you can use the emergency key or a backup power bank to open the safe box door and proceed with replacing the battery as we mentioned in the "First Time Setup" Section.

Password Changing

1. Press the **'Restart'** button located on the back of the door (inside the safe).

You will hear two horn sounds, and the yellow light will turn on.

2. Enter the new password (1 to 8 digits).

You will hear two horn sounds, and the yellow light will turn off.

3. Press the **'#'** button to confirm.

Note: For assurance, while the safe box door is open, test the new password once!


Opening the Safe Box

1. Enter the password.

You will hear two short horn sounds, and the green light will turn on.

2. Press the **'#'** button.


3. Rotate the lock handle clockwise to open the door.

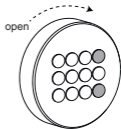

Closing the Safe Box

1. Close the Door

2. Rotate the lock handle Counter clockwise to lock the door



First Time Setup

Sadid safe boxes will only be initially opened by using Digital lock and power bank, and in subsequent instances, it will be possible to open them with the emergency key and code. **The emergency key is inside the safe box.**

Opening with the Password:

1. First, insert the required batteries into the power bank.
2. Connect the power bank to the charging socket, which is located under the Sadid magnetic logo to activate the lock.
3. Sadid safe boxes come with the factory-set password '12345678'.
4. Enter this password and press the '#' key.
The green light will turn on.
5. Rotate the lock handle in the clockwise direction to unlock.
6. Place the required batteries for the lock in the main lock battery compartment located behind the door.

Opening with the Emergency Key

1. Remove the magnetic logo at the bottom of the box to reveal the emergency key entry and backup battery port.
2. Insert the key and turn it counterclockwise, make sure not to pull the key out; otherwise, it will return to its original position.
3. Rotate the handle in the clockwise direction to open the door.
4. Open the internal battery box located behind the door.
5. Place four AAA batteries inside the battery box.

Components:

1. Light (Yellow, Green, and Red)

2. Magnetic Logo

3. Keyboard

4. Door Handle

5. Emergency Key Input

6. Emergency Keys

7. Backup Battery Input




8. Backup Battery

9. Internal Battery Box


10. Start Button

11. Ground Installation
Location for Compartment


12. Wall Installation
Location for Compartment

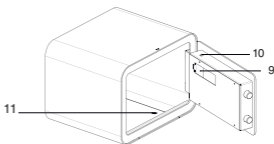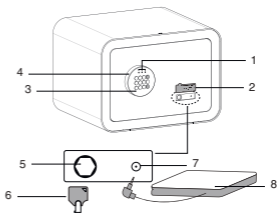



Wall Installation Method

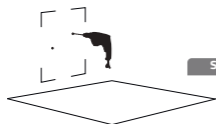

Step 1

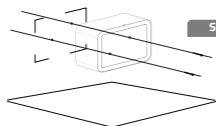

Step 2

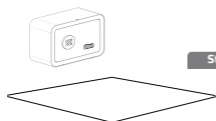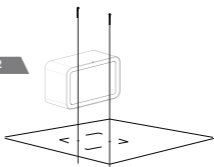

Step 3



Models:

- Model 350W
- Model 430W
- Model 470W
- Model 460H
- Model 430D
- Model Home Safe (Fire Proof)
- Model Home Safe F.P. (Finger Print & Fire Proof)
- Model 700 EAC
- Model 1100 EAC
- Model 1400 EAC
- Model 2000 (Inside Safe)



Sadid Safe Co.

Fireproof and theft-resistant safes produced by Sadid Safe Security Innovators are the new generation of these products in Iran.

The construction of the doors and bodies of these safes involves the use of high-thickness steel sheets.

The hinges of the fireproof safes from Sadid are installed in the interior space.

The possibility of connecting the safes to the ground is provided through the use of steel roll bolts.



User Manual

Sadid Safe Boxes (Digital Lock)



Customer Services

☎ 021-91303713(194)

☎ 09397276138

🌐 www.sadidsafe.com