




دستورالعمل صندوق های سدید با قفل لمسی اثر انگشتی مدل LF

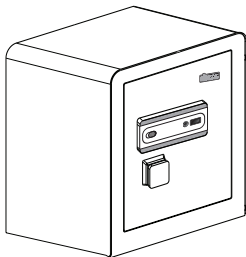

خدمات پس از فروش

☎ ۰۲۱-۹۱۳۰۳۷۱۳ (۱۹۴)

☎ ۰۹۱۰۸۶۱۹۱۹۱

🌐 www.sadidsafe.com

مدل‌ها:

- مدل 700LF
- مدل 1000LF
- مدل 1200LF
- مدل 1500LF
- مدل 2000LF
- مدل 800VLF
- مدل الیت 1200
- مدل 550LF
- مدل 800LF
- مدل 1000LF slim
- مدل 1200D LF
- مدل 1500D LF
- مدل جاسلحه LF
- مدل الیت 1000
- مدل الیت 1500



گاو صندوق‌های نسوز و ضد سرقت

صندوق‌های نسوز و ضد سرقت تولید شده توسط شرکت فناوران ایمن گستر سدید، نسل جدید این محصولات در ایران هستند.

• در ساخت درب و بدنه این صندوق‌ها از ورق‌های فولادی با ضخامت بالا استفاده شده است.


• برای مقاوم‌سازی این صندوق‌های نسوز در برابر حرارت، در بدنه آن پشم‌سنگ به کار رفته است.

• لولای درب صندوق‌های نسوز سدید مخفی بوده و در فضای داخلی صندوق تعبیه شده است.


• امکان اتصال صندوق‌ها به زمین با استفاده از رول بولت‌های فولادی فراهم شده است.

نحوه نصب صندوق به زمین


مرحله ۱



مرحله ۲

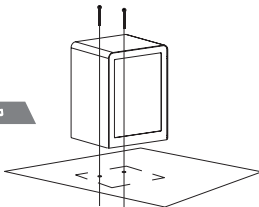

مرحله ۳

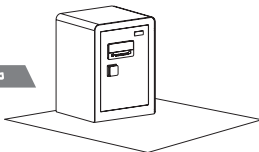

اقلام همراه صندوق

۴- چهار عدد باتری قلمی برند الکالاین

۵- پاور بانک

۱- کلید اصلی


۲- کلید صندوقچه داخلی

۳- کلید صندوقچه مخفی



اجزای تصویری صندوق

- ۱۳- محل قرارگیری باتری
- ۱۴- درب محل قرارگیری باتری
- ۱۵- دکمه اتصال به اپلیکیشن (قرمز)
- (موجود در ورژن سفارشی توپا)

- ۱- حسگر تشخیص اثر انگشت
- ۲- دکمه وضعیت مسافرت
- ۳- صفحه کلید رمز لمسی
- ۴- ورودی کلید اصلی
- ۵- محل ورود سوکت پاوربانک
- ۶- دستگیره درب
- ۷- صندوقچه داخلی
- ۸- ورودی کلید صندوقچه داخلی
- ۹- صندوقچه مخفی
- ۱۰- ورودی کلید صندوقچه مخفی
- ۱۱- محل نصب صندوق به زمین
- ۱۲- دکمه ریست

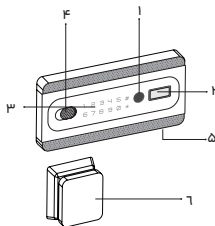

درپوش پلاستیکی را بکشید

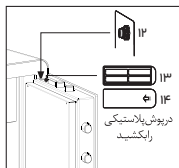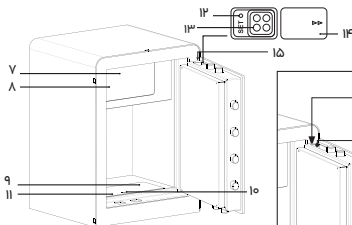

جا باتری و کلید ریست در برخی
از مدل‌ها در این قسمت قرار دارد

بازگشایی اولیه صندوق

- ۱- ابتدا باتری های مخصوص را داخل پاوربانک قرار دهید.
- ۲- پاوربانک را با کمک سیم رابط به سوکت شارژ واقع در زیر صفحه کلید قفل متصل کنید تا قفل روشن شود.
- ۳- کلید اصلی گاوصندوق (کلید مشکی و طلایی) را در جای خود (در قسمت اجزا شماتیک شماره ۴ در صفحه ۳) قرار دهید و بصورت ساعت گرد بچرخانید.
- ۴- با لمس صفحه کلید لمسی قفل، اعداد و آیکن های آن فعال می شود.
- ۵- رمز کارخانه (۱۲۳۴) را وارد کنید و کلید **##** را فشار دهید. (در این حالت هر اثر انگشتی درب صندوق را باز خواهد کرد.)
- ۶- پس از لمس حسگر اثر انگشت چراغ دور آن سبز می شود و روی صفحه کلید آیکن **Right**  به رنگ سبز نمایان می شود.
- ۷- بلافاصله بعد از این مرحله، دستگیره فلزی طلایی رنگ صندوق را در جهت حرکت عقربه های ساعت بچرخانید تا قفل باز شود.
- ۸- سپس باتری های جدید (۴ عدد باتری آلکالاین) را داخل محفظه باتری (در قسمت اجزا شماتیک شماره ۱۳ در صفحه ۳) واقع در لبه داخلی بالا درب صندوق قرار دهید.
- ۹- راه اندازی اولیه صندوق بطور کامل انجام شده است.

توجه: چنانچه باتری تعویض شده از نوع آلکالاین (باتری پر قدرت) نباشد، حتی با وجود روشن شدن چراغ قفل، ممکن است درب را باز نکند. حتما از باتری آلکالاین استفاده کنید.

راه اندازی اولیه صندوق و تعیین رمز عبور و اثر انگشت جدید

برای اعمال این تغییر نیازمند ورود به منو مدیریت هستید.

۱- ابتدا دکمه SET (در قسمت اجزا شماتیک شماره ۱۲ در صفحه ۳) را یکبار فشار دهید و رها کنید. (توجه: در صورت نگه داشتن دکمه SET، قفل صندوق ریست می شود و تنظیمات امنیتی به حالت کارخانه باز می گردد.)

۲- پس از شنیدن پیغام صوتی دستگاه و نمایان شدن (علامت ) به رنگ آبی، رمز مدیریت (۱۲۳۴۵۶) را وارد کنید و کلید **#** را فشار دهید. (بعد از این مرحله اعداد ۱ تا ۵ روی صفحه کلید روشن و بقیه اعداد خاموش می شوند)

۳- برای تغییر یا ایجاد رمز جدید، کلید ۱ را فشار دهید.

۴- رمز جدید را بین ۲ تا ۸ رقم وارد کنید و کلید **#** را فشار دهید.

۵- رمز جدید را مجدد وارد کنید و کلید **#** را فشار دهید.

۶- رمز جدید شما با موفقیت فعال شد. (در این مرحله بصورت خودکار به منوی مدیریت باز خواهید گشت)

۷- برای افزودن اثر انگشت جدید، کلید ۲ را فشار دهید.

۸- انگشت خود را روی حسگر اثر انگشت قرار داده و بردارید. این کار را چند مرتبه تکرار کنید تا نوار دور حسگر اثر انگشت سبز شود.

۹- با نمایان شدن آیکن  Right به رنگ سبز، اثر انگشت شما با موفقیت اضافه می شود. (در این مرحله بصورت خودکار به منوی مدیریت باز خواهید گشت)

۱۰- برای حذف اثر انگشت ها کلید ۳ را فشار دهید. با زدن کلید ۳ تمامی اثر انگشت ها حذف شده و درب صندوق با هر اثر انگشتی باز خواهد شد.

- ۱۱- برای تغییر رمز مدیریت کلید ۴ را فشار دهید.
- ۱۲- رمز مدیریت جدید را بین ۲ تا ۸ رقم وارد کنید و کلید # را فشار دهید.
- ۱۳- رمز مدیریت جدید را مجدد وارد کنید و کلید # را فشار دهید.
- ۱۴- رمز مدیریت جدید شما با موفقیت فعال شد. (در این مرحله بصورت خودکار به منوی مدیریت باز خواهید گشت)
- ۱۵- کلید ۵، مربوط به تنظیمات حالات بازکردن درب صندوق است.
- ۱۶- با فشار دادن کلید ۵، اعداد ۱ و ۲ روی صفحه کلید قفل روشن و بقیه اعداد خاموش می شوند.
- ۱۷- برای بازگشایی در حالت عادی کلید ۱ و بازگشایی در حالت امن کلید ۲ را فشار دهید.
- توجه:** در حالت بازگشایی عادی، قفل با وارد نمودن اثر انگشت و یا رمز صحیح باز خواهد شد، اما در حالت امن، ورود هم رمز و هم اثر انگشت صحیح الزامی است.
- توجه:** در صورت انتخاب بازگشایی در حالت امن، حتما ۲ یا ۳ اثر انگشت تعریف کنید تا مشکلی جهت بازگشایی درب نداشته باشید.
- توجه:** در صورت نگهداشتن دکمه SET، قفل صندوق ریست می شود و تنظیمات امنیتی به حالت کارخانه باز می گردد.
- توجه:** برای حصول اطمینان، در حالی که درب صندوق باز است، اثر انگشت جدید و رمز عبور را یکبار امتحان کنید.
- توجه:** در صورتی که مرحله ای از تنظیمات را اشتباه طی کردید یا هنگام تکرار رمز جدید، رمز را فراموش کردید، چند ثانیه صبر کنید تا صفحه کلید خاموش شود و مجدد مراحل را از اول طی کنید.

نکته مهم امنیتی

توجه داشته باشید حتما پس از تکمیل راه اندازی اولیه صندوق، برای خروج از تنظیمات کارخانه و ارتقاء سطح امنیتی قفل، تمامی رمز ها (رمز کاربر، رمز مدیر) را تغییر داده و همچنین حداقل یک اثر انگشت تعریف نمایید.


توجه: به خاطر داشته باشید حتما از باتری های موجود در بسته بندی شرکت و یا باتری های با کیفیتی مانند برند آکالاین استفاده نمایید تا از بروز مشکلات فنی برای جلوگیری نمایید.

خروج از منوی مدیریت

برای خروج از منو مدیریت کلید ****9** را بفشارید.

باز کردن صندوق


۱- رمز عبور را وارد نموده و دکمه **##** را بفشارید (و یا انگشت مورد نظر را بر روی حسگر قفل قرار دهید)



۲- چراغ سبز روشن و درب باز خواهد شد.
۳- دستگیره فلزی زیر قفل را در جهت حرکت عقربه های ساعت بچرخانید تا درب باز شود.

بستن صندوق

۱- درب را ببندید.
۲- دستگیره را بر خلاف جهت عقربه های ساعت بچرخانید.



آلارم رمز اشتباه

در صورت ورود رمز اشتباه برای سه بار متوالی و یا ورود اثر انگشت برای شش بار متوالی آلارم ورود رمز اشتباه فعال خواهد شد.

توجه: ورود رمز و یا اثر انگشت صحیح آلارم هشدار را غیر فعال می نماید.

آلارم شوک و ضربه

۱- صفحه کلید را لمس کنید تا روشن شود.

۲- دکمه **##** را بفشارید.

۳- دکمه تنظیمات آبی رنگ روشن خواهد شد و یک پیام به زبان انگلیسی گفته می شود.

● سنسورهای شوک و ضربه فعال شده اند و در صورت ورود شوک یا ضربه به صندوق، آلارم به صدا در خواهد آمد.

توجه: ورود رمز و یا اثر انگشت صحیح، آلارم هشدار را غیر فعال می نماید.

تعویض باتری

در صورت شنیده شدن پیام صوتی **Battery is Low** (باتری ضعیف است) و یا باز نشدن صندوق و کم رنگ شدن صفحه نمایش، باتری های قفل را از محفظه مشکی رنگ سمت راست داخل درب صندوق تعویض نمایید.

بازگشت به تنظیمات کارخانه

۱- دکمه **SET** یا ریسست (در قسمت اجزای شماتیک شماره ۱۲) داخل درب را به مدت ۵ ثانیه فشار داده و نگه دارید.

۲- جمله **Factory Settings are Restore successfully** به معنای تنظیمات کارخانه با موفقیت باز نشانی شد را خواهید شنید.
- قفل با موفقیت به تنظیمات کارخانه بازگشته است.

حالت مسافرت صندوق

با فشردن گوشه سمت راست درپوشی که بغل حسگر اثر انگشت قرار دارد (در قسمت اجزا شماتیک شماره ۲) درپوش دکمه باز می شود. با فشردن دکمه مشکی رنگ داخل درپوش، حالت مسافرت فعال شده تا در بازه زمانی طولانی که دور از خانه هستید و یا بنا به دلایلی نیازی به بازگشایی صندوق ندارید از هدر رفتن باتری جلوگیری شود و به عمر مفید قفل بیافزاید. برای غیرفعال کردن حالت مسافرت همین کار را تکرار کنید و با فشردن دکمه مشکی رنگ، حالت مسافرت غیرفعال خواهد شد.

اطلاع و هشدار

- ۱- دفترچه راهنما و پاوربانک را در داخل صندوق قرار ندهید.
- ۲- در صورت عدم استفاده از صندوق برای مدت طولانی، باتری ها را از قفل خارج نمایید تا از خرابی سیستم الکترونیکی قفل، جلوگیری بعمل آید.
- ۳- در صورت نصب صندوق به زمین، از استحکام و ایمن بودن بستر، اطمینان حاصل نمایید.
- ۴- در صورت اتمام باتری، از باتری های قلمی از نوع آلکالاین (قدرتمند تر از باتری عادی هستند) استفاده کنید تا قدرت باز کردن زبانه ها را داشته باشد.

توجه: در صورت تعویض باتری لزوما روشن شدن قفل، دلیل بر امکان باز شدن درب نیست و ممکن است باتری ضعیف، قدرت باز کردن درب را نداشته باشد.

Travel Mode

Pressing the right corner of the cover next to the fingerprint sensor (in the schematic components section, number 2) opens the button cover. Pressing the black button inside the cover activates the travel mode to prevent battery drain and extend the useful life of the lock when you are away from home for a long period of time or for some reason do not need to open the box. To disable the travel mode, repeat the same process and press the black button to disable the travel mode.

Cautions & Further Information:

1. Do not place the user manual and power bank inside the Safe Box.
2. If the safe is not used for an extended period, remove the batteries from the lock to prevent damage to the electronic lock system.
3. Please make sure of the strength and safety of the wall or the Ground Before installing the Safe Box.
4. In case the battery runs out, use AA alkaline batteries (which are more powerful than regular ones) to ensure the latch can be opened.

Note: If the replaced battery is not an alkaline (high-power) type, the lock may not open even if the indicator light turns on. Always use alkaline batteries.

Impact and Movement Alarm Activation

1- Touch the screen to light up the keys.

2- Press **#**.

The blue settings button will light up, and a voice message will be played in English.

- The sensors are now activated; the alarm will sound if the safe is moved or shaken.

Note: The alarm stops when the correct password or fingerprint is entered.

Battery Replacement

1- If the voice prompt says "**Battery is Low**," the batteries need replacing.

2- Place new batteries in the compartment on the upper Right edge inside the door.

Reset to Factory Setting

1- Press and hold the **SET or RESET Button** (in the component part, number 12), inside the upper left edge of the safe door for **5 seconds**.

2- You will hear, "**Factory Settings are restored successfully**."

3- The system will be reset to default.

Exiting the Management Menu

Press * to exit the management menu.

Opening the safe

1- Enter the password and press the # key (or place the desired finger on the sensor above the lock)




2- The green light will turn on, and the door will open.

3- Rotate the handle around the lock clockwise to open the door

Closing the Safe Box

1. Close the door
2. Rotate the lock handle counter clockwise to lock the door



Wrong Password Alarm

- 1- Entering the wrong password three times in a row will trigger a 1 minute alarm.
- 2- If six incorrect fingerprints are detected, the alarm will also sound for 1 minute.

Note: The alarm stops when the correct password or fingerprint is entered.

16. After pressing **5**, only numbers **1** and **2** on the keypad will remain illuminated, while the other numbers will turn off.

17. Press **1** to select Normal Unlock Mode, or press **2** to select Secure Unlock Mode.

Note: In Normal Unlock Mode, the lock can be opened using either a valid fingerprint or the correct code. In Secure Unlock Mode, both the correct code and a valid fingerprint are required.

Note: If Secure Unlock Mode is selected, it is strongly recommended to register 2 or 3 fingerprints to avoid any difficulty in opening the safe door.

Caution: If the SET button is pressed and held, the lock will be reset and all security settings will return to the factory default settings.

Note: For verification purposes, test the new fingerprint and password once while the safe door is still open.

Note: If you make a mistake during setup, or if you forget the new code when re-entering it, wait a few seconds until the keypad turns off, then restart the process from the beginning

Important Security Tip!

Please make sure to change all passwords (User password, Admin password) and also set up a finger print after completing the initial set up of the safe. This will exit the default factory setting & enhance the security level of the lock.

Note: in the safe mode you need to enter both finger print & password but in normal mode, one of them will open the safe.

Note: Please make sure to use the batteries provided in the company's packaging or high-quality batteries such as the Alkaline brand to avoid technical issues.

2. After the voice prompt is heard and  appears in blue, enter the management code (123456) and press the # key.

After this step, only numbers **1** to **5** on the keypad will remain illuminated, while the other numbers will turn off.

3. To change or create a new user code, press **1**.

4. Enter a new code consisting of **2** to **8** digits, then press the # key.

5. Re-enter the new code, then press the # key.

6. Your new code has been successfully activated.

The system will automatically return to the Management Menu.

7. To add a new fingerprint, press **2**.

8. Place your finger on the fingerprint sensor and remove it.

Repeat this process several times until the indicator ring around the sensor turns green.

9. When the word "Right  " appears in green, your fingerprint has been successfully added.

The system will automatically return to the Management Menu.

10. To delete fingerprints, press **3**.

Pressing 3 will delete all stored fingerprints, and the safe door will then open with any fingerprint.

11. To change the management code, press **4**.

12. Enter a new management code consisting of **2** to **8** digits, then press the # key.

13. Re-enter the new management code, then press the # key.

14. Your new management code has been successfully activated.

The system will automatically return to the Management Menu.

15. Key 5 is used to configure the safe door unlocking mode.

Initial opening of the safe

1. Insert the specified batteries into the power bank.
2. Using the connecting cable, connect the power bank to the charging port located underneath the lock keypad to power on the lock.
3. Insert the safe's master key (black and gold key) into the key slot (see Schematic Components, Item **4**, Page **3**) and turn it clockwise.
4. Touch the lock's touchscreen keypad to activate the numbers and icons.
5. Enter the factory default code (**1234**), then press the **#** key. **Note:** At this stage, the safe door can be opened with any fingerprint.
6. Touch the fingerprint sensor. The indicator light around the sensor will turn green, and the word "Right  will appear in green on the keypad display.
7. Immediately after this, turn the safe's gold-colored metal handle clockwise to open the lock.
8. Install 4 new alkaline batteries in the battery compartment (see Schematic Components, Item **13**, Page **3**), located along the upper inner edge of the safe door.
9. The initial setup of the safe is now complete.

Note: If an incorrect password is entered, the lock will display red, and "**Error**" will be shown.

Initial Safe Setup and Setting a New Password and Fingerprint

To make these changes, you must first enter the Management Menu.

1. Press and release the SET button once (see Schematic Components, Item **12**, Page **3**).

Caution: If the SET button is pressed and held, the lock will be reset and all security settings will return to the factory default settings.

Components:

- | | |
|-----------------------|------------------------------------|
| 1. Fingerprint sensor | 13. Battery compartment |
| 2. Travel mode button | 14. Battery compartment cover |
| 3. Touch keypad | 15. App connection button (RED) |
| 4. Main key slot | (Available in Tuya custom version) |

5. Power bank socket input

6. Door handle

7. Inner compartment




8. Inner compartment key slot

9. Hidden compartment

10. Hidden compartment key slot

11. Floor mounting hole

12. Reset button

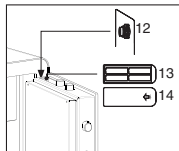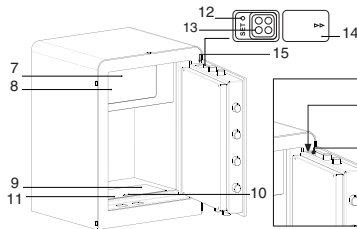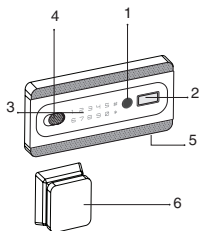


The battery compartment and reset button are located in this area on some models.

Ground Installation Method


Step 1



Step 2

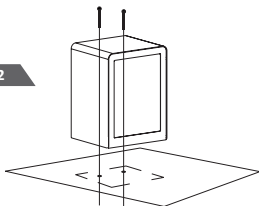

Step 3

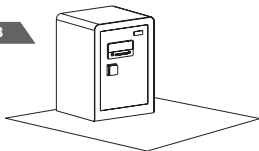


Items included in the box

1. Power bank
2. Inner compartment key
3. Hidden compartment key
4. AA battery (alkaline brand)
5. Main key

Models:

- Model 550 LF
- Model 800 LF
- Model 1000LF slim
- Model 1200DLF
- Model 1500D LF
- Gun Safe
- Elit 1000
- Elit 1500
- Model 700 LF
- Model 1000LF
- Model 1200LF
- Model 1500 LF
- Model 2000LF
- Model 800 VLF
- Elit 1200



Sadid Safe Co. Anti-Theft & Fire Proof Safes:


- Fireproof and theft-resistant safes produced by Sadid Safe Security Innovators are the new generation of these products in Iran.
- The construction of the doors and bodies of these safes involves the use of high-thickness steel sheets.
- To enhance the resistance of these safes against moisture and heat, rock wool has been used. The hinges of the fireproof safes from Sadid are installed in the interior space.
- The possibility of connecting the safes to the ground is provided through the use of steel roll bolts.



Sadid Fire Proof Safe

with Touch Fingerprint Lock – LF Model

V 05/02

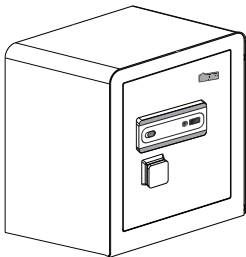

Customer Services

☎ 021-91303713(194)

☎ 09108619191

🌐 www.sadidsafe.com